


Ergonomic Chair Lite

Assembly Guide

Branch

The new way of working you've been waiting for.

Scan here for a digital copy
of your assembly guide.

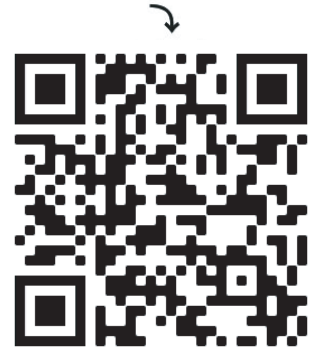




Caution

- Read this guide fully before assembly and verify all components are present.
- Use this product only for seating one person at a time.
- Do not use this chair as a step stool or ladder, or on uneven floor surfaces.
- Do not sit on any part of the chair except the seat.
- Do not use the chair unless all bolts, screws, and knobs are fully tightened.
- Handle the Cylinder and Mechanism carefully as they may have grease, which can stain chair fabric or clothing.
- Every six months, make sure all bolts, screws, and knobs are fully tightened to ensure stability.
- If any parts are missing, broken, damaged, or worn, stop use of the product until repairs are made using Branch-authorized parts.
- Failure to follow these warnings could result in serious injury.
- Keep this manual for future reference.

Components

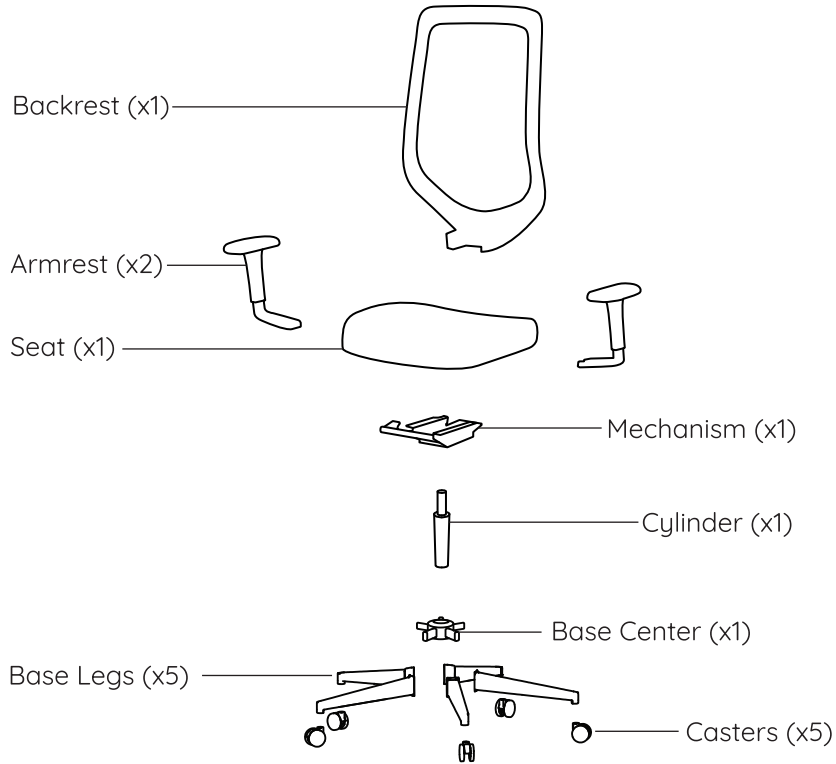

Included Hardware



M8x20mm Screw (x8)



M6x25mm Screw (x6)




M6x25mm Bolt (x5)




Allen Key (x1)

1


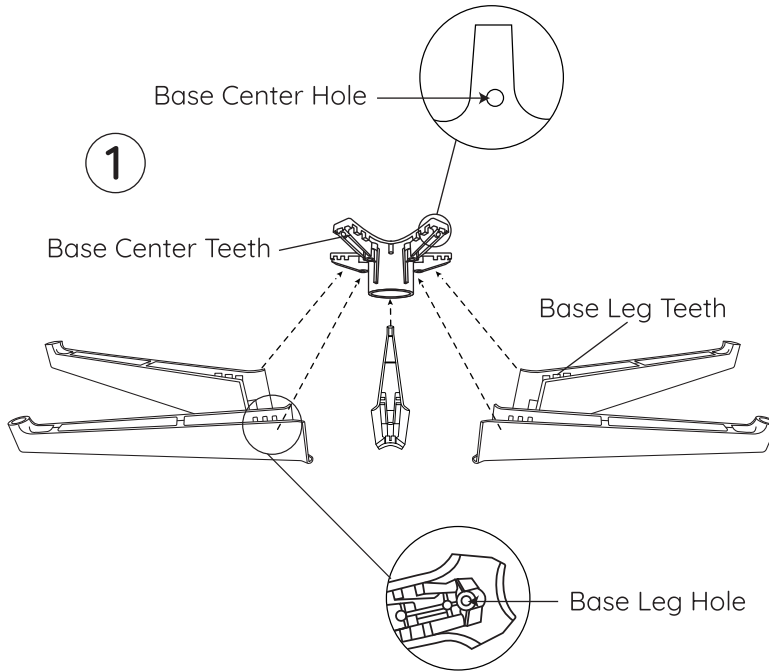


2

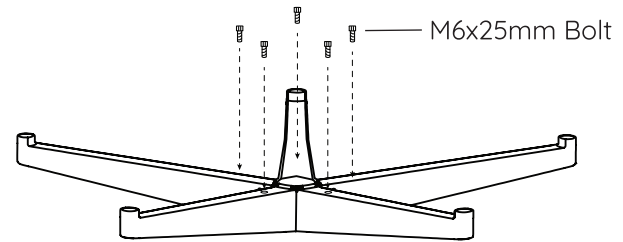

With the **Base Center** (x1) upside-down, align and position the **Base Legs** (x5) into the **Base Center**, matching the **Hole** and **Teeth** on the **Base Legs** to those on the **Base Center**. Tightly secure the **Base Legs** using the **M6x25mm Bolts** (x5) and the **Allen Key** (x1).

2

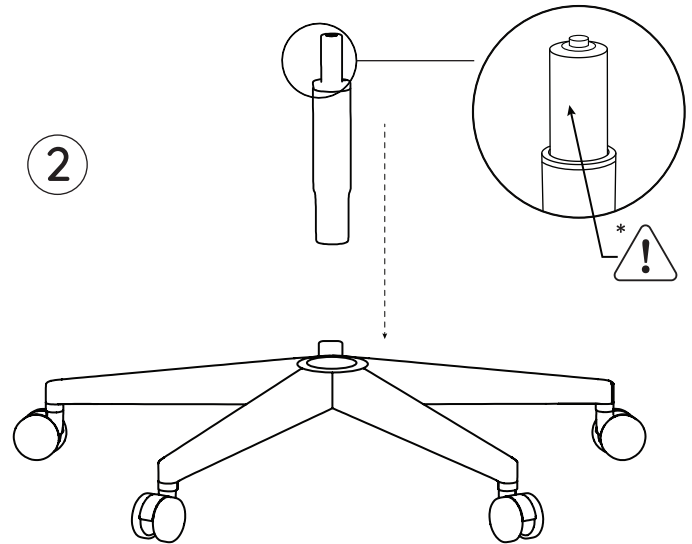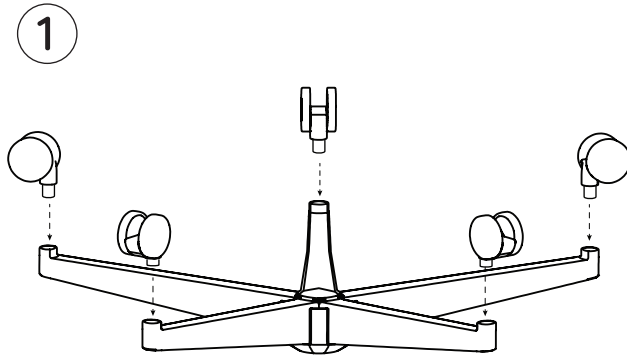


With the Base still upside down, push the **Casters** (x5) into each hole with a fair amount of force (they should 'pop' in). Once completed, turn the assembled Base over and insert the **Cylinder** (x1) with the large end facing the floor.



*** Caution:** Handle the **Cylinder** carefully as it may have grease on top, which can stain fabric or clothing.


3

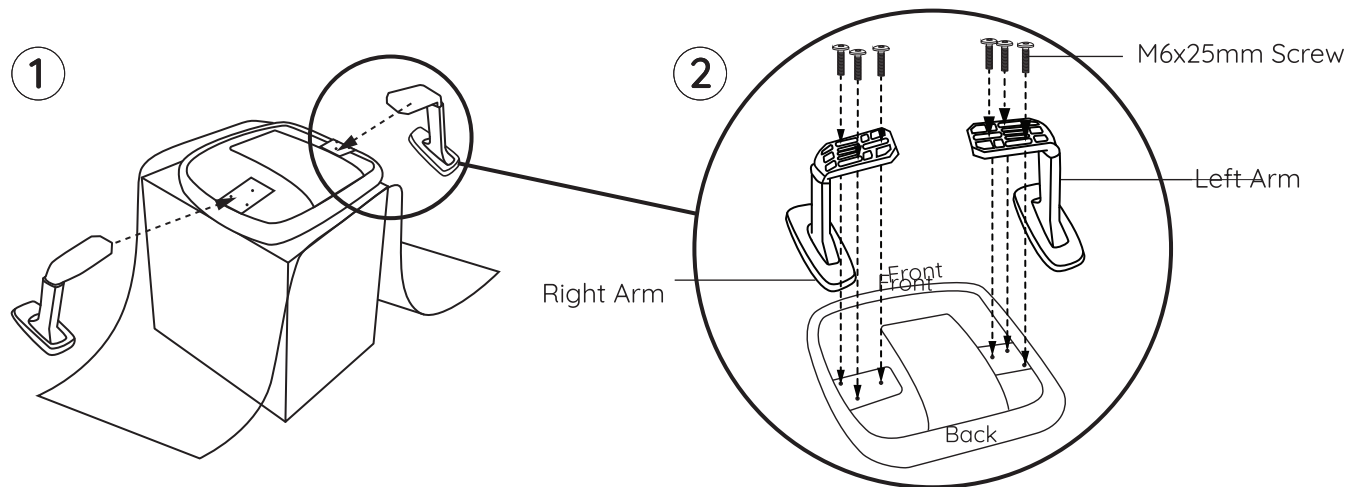

Place the **Seat** (x1) upside down on the box it came in. Align the **Armrests** (x2) with the underside of the **Seat**. Position the Arm Buttons towards the Front of the **Seat** for correct orientation. Insert the **M6 x 25mm Screws** (x6) through the **Armrests** and into the threaded holes on the bottom of the **Seat**. Tighten securely with the **Allen Key** (x1).


Note: The **Armrests** have slotted holes for width adjustment. Adjust both **Armrests** evenly before fully tightening the **M6 x 25mm Screws** to ensure balanced comfort.

4

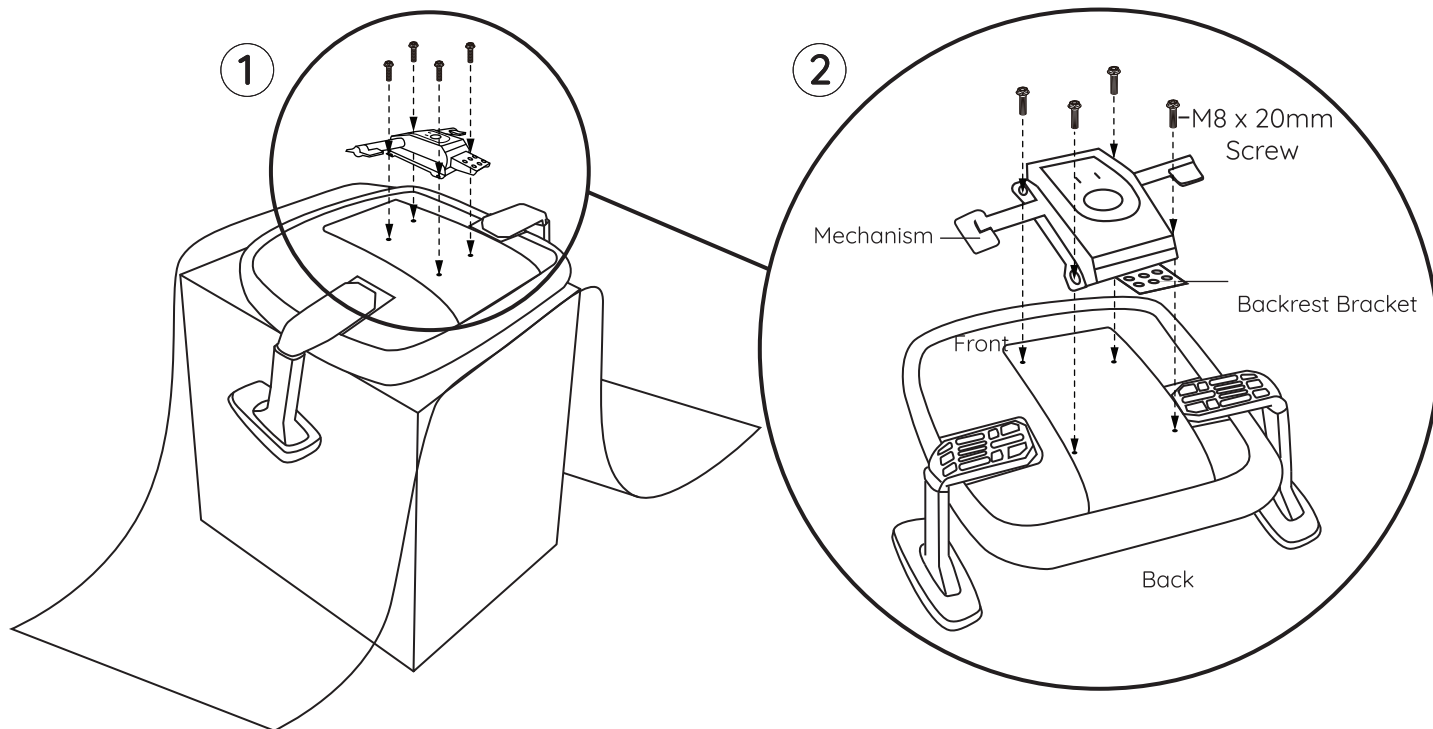


With the **Seat** (x1) upside down, position the **Mechanism** (x1) on the bottom of the **Seat**, aligning the holes. Make sure the Backrest Bracket faces the rear of the **Seat**. Insert the **M8 x 20mm Screws** (x4) and tighten securely with the **Allen Key** (x1).

5

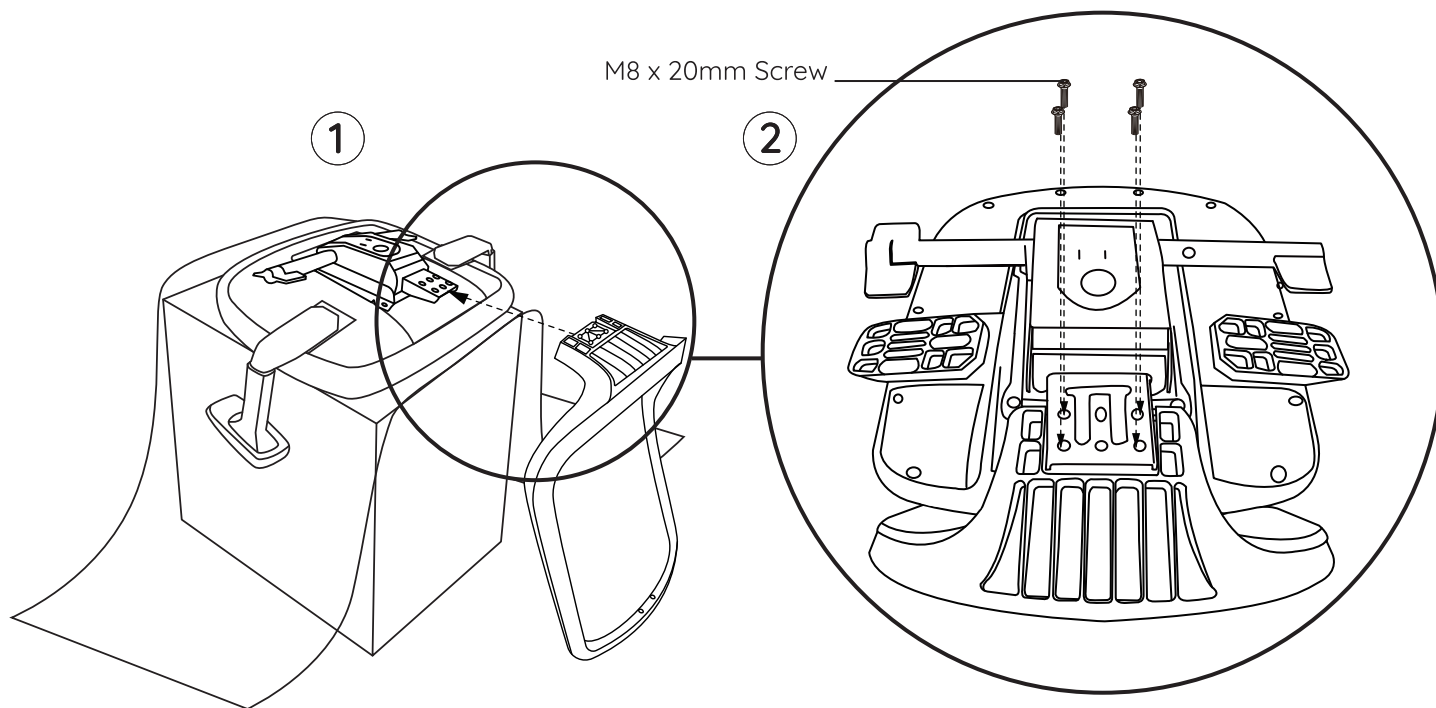

Carefully position the **Backrest** (x1) into the bracket of the **Mechanism** (x1) , aligning the holes. Insert the **M8 x 20mm Screws** (x4) and tighten securely with the **Allen Key** (x1).

6

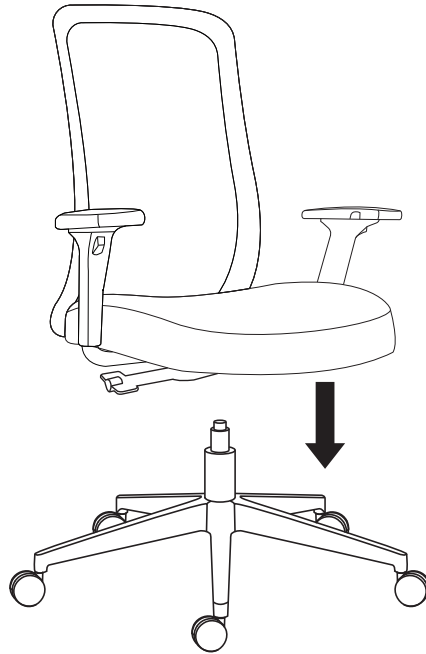


With a friend, carefully lower the assembled chair top onto the base, aligning the **Cylinder** with the bottom of the **Mechanism**. Push down firmly to secure.

User Guide

Seat Height:

Rear Paddle lever on the right side

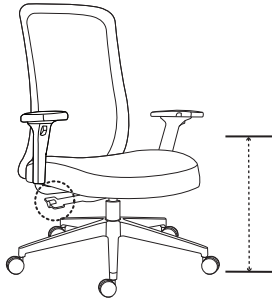

To raise:


While taking your weight off the chair, lift lever up.

To lower:

While seated, lift lever up.

Seat Depth:

Front Paddle lever on the right side

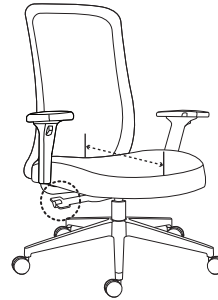


To adjust depth:

Pull the lever up while sliding the seat forward or back. Release the lever to lock

Armrest Height:

Button under each armrest

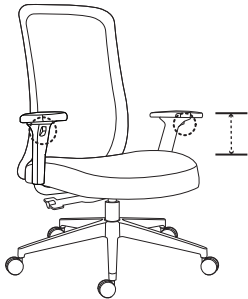


To adjust:

Push and hold button to raise or lower arm. Release button to lock.

Armrest Width:

Screws under the seat

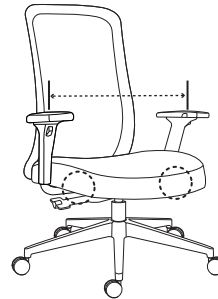

To lock and unlock:

Loosen/tighten the three screws attaching the armrest to the seat.


To adjust:

Once unlocked, pull or push the armrest to change the width.

User Guide

Armpad Position:

Armpad Buttons on armpad interior

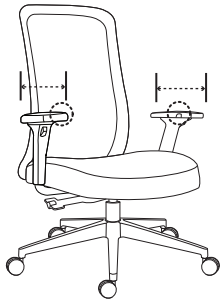

To adjust:

Press the buttons on the inside of the armrests, sliding forward or backward to the desired position. Release button to lock.

Backrest and Tilt Lock:

Paddle lever on the left side



To engage:

Pull the lever up while leaning back to adjust the back tilt angle.

To Disengage:

Pull the lever up and lean back until you hear a click,

All Done!

Go ahead, try it out. You may experience what we call an “ahhh” sensation. That’s completely normal. You’re now well equipped for whatever the workday throws at you.

Now, don’t be shy. Show us how it looks!

@branchfurniture

#officebybranch

Contact

Have a question, comment, or suggestion?

hello@branchfurniture.com
branchfurniture.com

V1.0-2026-08-05

Branch